



Keep the SPN- key pressed for a few seconds to exit the TRANSPONDER-selection menu or modify one of the following parameters to disable the TPSAT mode:

- Frequency (press CH FR key)
- Local oscillator (press LO key)
- 22 kHz (double pressure on DSQ key)
- LNB tension (press VOLT key)
- LNB activation/deactivation (press LNB key)
- Programme recall (press PR key)

4. Update and optimization of the related serial commands for the remote control.